


**LX7IWLCD INSTALLATION INSTRUCTIONS**

**Inside of Door Speaker**



Video and Audio terminals

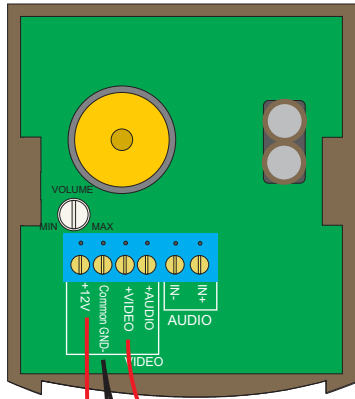

NOTE: Please see \* \* 3 programming for video duration on monitor when door station is pressed.

C304CR: 1-98 Seconds

C404CR/C403HIFI: 1-60 Seconds or 1-20 Minutes

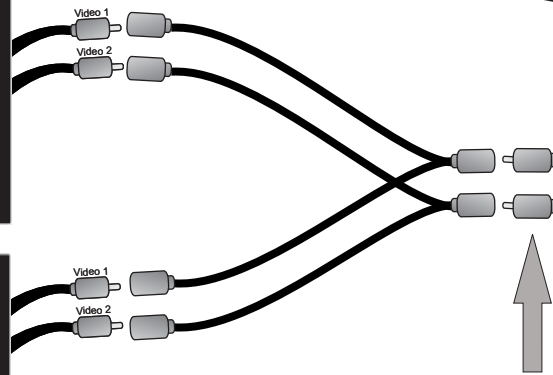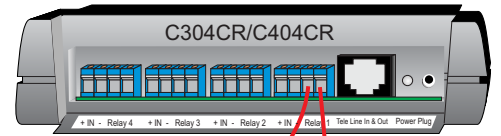

Connect video from second door station to video 2 through relay 2.