TeleDoorBell™

Wiring connection for your computer / Internet / Fax or Answering Machine

Installation Guide

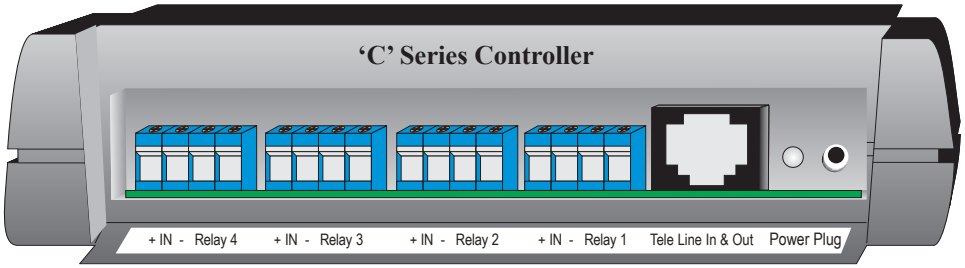

By using the existing wiring already available at the phone jack. Use the spare pair and connect these two wires to the Red and Green leads of the new phone jack; attach the other end of this spare pair to the incoming phone line; make sure its connected before the TeleDoorBell e.g.: (at the input of the CA38A or RJ31X jack or at the main phone line terminal block).

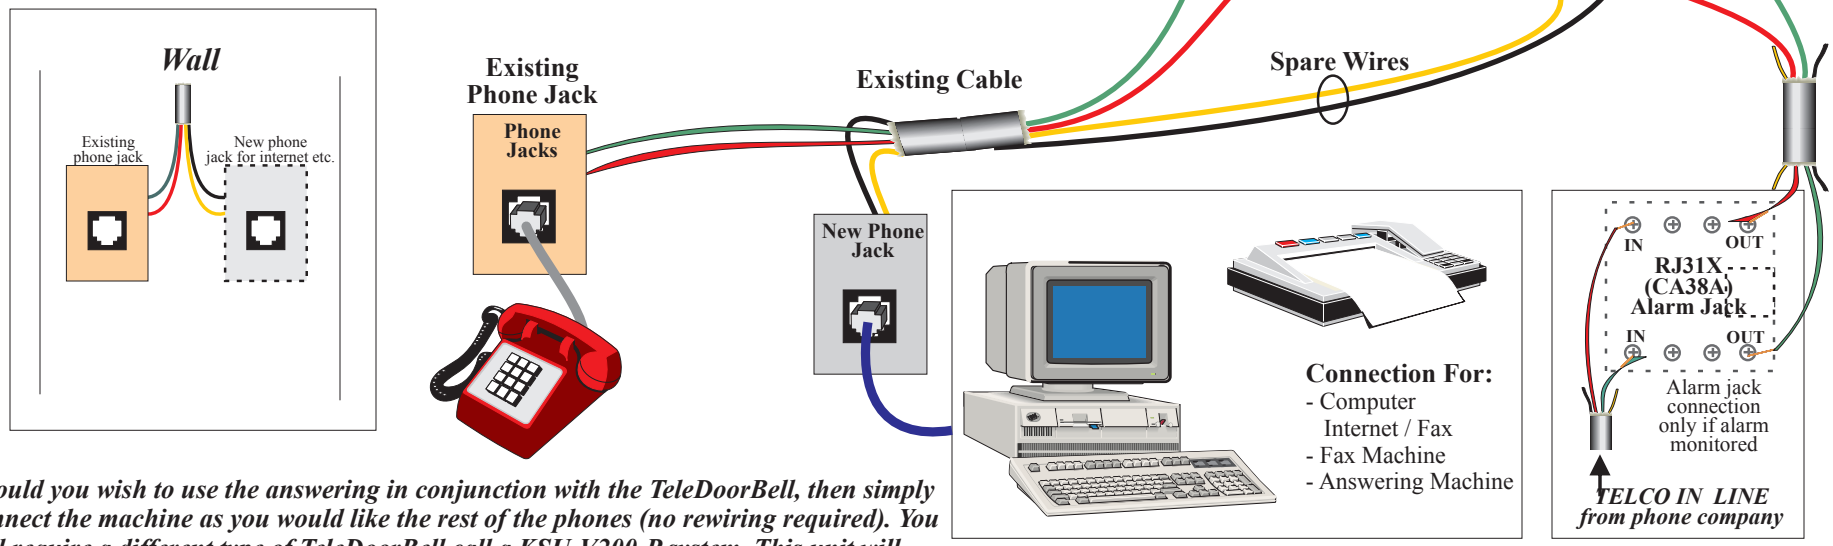

Should you wish to use the answering in conjunction with the TeleDoorBell, then simply connect the machine as you would like the rest of the phones (no rewiring required). You will require a different type of TeleDoorBell call a KSU-V200-P system. This unit will provide 6 long rings (enough to trigger the answering machine). Note: different results may occur with different types of answering machines (no distinguished ring).