

REMOTE ACCESS DIAL-UP Dial In

REMOTE Feature must be activated within programming.

- 1) From an external line, the user calls into the premise.
- 2) The USER will allow the phone to ring three times then immediately HANG-UP.

(Note: the rings must be exactly three (3). If less or more than three (3) then the unit will not answer)

- 3) Wait (10 - 15) seconds and immediately call back.
 - 4) The unit should answering on the first RING (USERS will need to fine tune their timing and call back procedures to determine the optimum performance and response)
 - 5) When system answers... **(1) Beep** will be heard
 - 6) ENTER 4-DIGIT USER PASSCODE
- (2) Beeps** will be heard. **Now you are in USER MODE.**

At this point you have full control of the TeleDoorBell and its functions. User can activate or change any settings. A 30 Second time limit between digits or functions will apply, if there is no activity within the 30 second limit the unit will hang-up.

When communicating to a Door Station Speaker remotely, a maximum of 20 minute Talk-Time is allowed. Unit will disconnect after the 20-minute time limit has expired or if the user hangs up.

Note: Once connected to a door station it is not possible to return to user mode.

*** All commands must be executed within 5 seconds after offhook.**

USER PROGRAMMED SETTINGS

Ring Pattern Configuration :

DISTINCT PATTERN or 6-RING PATTERN (check one)

Call Restriction Phone Number Programming :

Bin : _____

Bin : _____

Bin : _____

Bin : _____

(Up to 9 Bin's Available)

Door Station

Caller ID : ENABLED [ON] or DISABLED [OFF] (check one)

Doorbell Relay#3

Setup : ENABLED [ON] or DISABLED [OFF] (check one)

Remote Dial-up

Answer : ENABLED [ON] or DISABLED [OFF] (check one)

Door Station Call Forwarding Phone# :

Relay Timing Configuration ENTER: to

RELAY #1: (2-digit timing number) RELAY#1 Controls: _____

RELAY #2: (2-digit timing number) RELAY#2 Controls: _____


RELAY #3: (2-digit timing number) RELAY#3 Controls: _____

RELAY #4: (2-digit timing number) RELAY#4 Controls: _____

4-DIGIT PASSCODE : _____ (Factory Default)



TeleDoorBell™
C-Series Controller
C304CR



User Guide

DOOR STATION CALL WAITING




When on a phone call and the Door Station button is pressed... you will hear a distinctive tone in your phone handset). To switch from the caller on the line to the door station you simply...

PRESS * 4 Now you've switched from the caller to the door station. To switch back to your caller you simply...

PRESS * 4 again and now you are switched back to your caller.

ACTIVATING A DOOR STATION

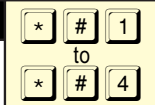


Pickup any phone and...

PRESS * # _ Followed by the Door Station Number.
(Ex: press * # 1 for Door Station 1)

NOTE: Maximum activation / monitoring time allowed is approximately 20 minutes; the unit will disconnect after the expiry time.

RINGER ON/OFF OPTION



This will turn off the *TeleDoorBell* ringer. The phones will not ring in this mode when a Door Station Button is pressed, but if the phone is picked up, you can communicate to the door. To do this you simply pickup any connected phone set and...


1) PRESS * # 7 7 (2) BEEPS = RINGER ON (FACTORY DEFAULT)
(3) BEEPS = RINGER OFF

2) Listen for BEEPS.

NOTE: By continuing to Press the * # 7 7 Command, the system will toggle between (ON / OFF)

* All commands must be executed within 5 seconds after offhook.

ACTIVATING / DEACTIVATING A RELAY

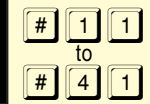

Timed Relays: Pickup any connected phone set and...

PRESS # 1 1 Relay 1
PRESS # 2 1 Relay 2
PRESS # 3 1 Relay 3
PRESS # 4 1 Relay 4
PRESS # 5 1 To activate relay which is connected to the door station which initiated communication.

Latching Relays: Pickup any connected phone set and...

PRESS # 1 9 Relay 1
PRESS # 2 9 Relay 2
PRESS # 3 9 Relay 3
PRESS # 4 9 Relay 4

Note: Once activated, the relay will perform its pre-programmed function and timing as PROGRAMMED by installer. In the condition of a LATCHED RELAY configuration, the user will have to ENTER the de-activation command to turn off that particular relay.

Deactivating Relays: Pickup any connected phone set and...

PRESS # 1 0 To deactivate Relay 1
PRESS # 2 0 To deactivate Relay 2
PRESS # 3 0 To deactivate Relay 3
PRESS # 4 0 To deactivate Relay 4

* All commands must be executed within 5 seconds after offhook.

DOOR STATION CALL FORWARDING



Pickup any connected phone set and...

PRESS * # 7 0 **ON IMMEDIATE**

Turns ON Call Forwarding and all Door Station calls are IMMEDIATELY forwarded to your pre-programmed phone number after a one (1) RING pattern is heard indicating a Door Station call is being forwarded NOTE: For the shortest possible forwarding delay, disable the ringer. (See Ringer ON/OFF Option.)

PRESS * # 7 2 **ON DELAY**

Turns ON Call Forwarding feature but allows the user time to answer the premise phone before the system dials out. If no one picks up the in-house premise phone before the end of the selected "RING PATTERN" is completed; the unit forwards the Door Station call to your pre-programmed phone number.

PRESS * # 7 3 **OFF**

Turns OFF the Call Forwarding Feature. No Door Station Calls are Forwarded.

NOTE: Any Call in the process of being forwarded and/or already forwarded can be terminated at any time by ENTERING # 0 0 to CANCEL.

There is a 20 Minute Talk-Time limit when unit is call forwarded.
* All commands must be executed within 5 seconds after offhook.